

Periodic maintenance is essential for the efficient operation of the PROTL500 & PROTL1000. Release Assembly Cleaning and Repair Instruction Guide.

### Release Assembly Cleaning and Repair Instruction Guide

Clean the jack as thoroughly as possible with a degreaser and dry off completely.

Close the breather on the reservoir and lay the jack on its back with the pedals facing upwards.

1. Remove the pedal pivot pin
2. Remove the pedal
3. Remove the retaining screw
4. Remove the retaining clip
5. Remove the release pin from its barrel being careful to keep the spring under it



Clean out the release pin barrel with a soft cloth and clean all the components removed.

Check the surface of the release pin seal for damage and remove and replace if required.

This seal is available through TQB Brands as part of a kit and is also a common seal available from stores such as CBC Bearings, BSC Motion or independent seal suppliers. Please ensure your replacement is Nitrile and Duro 70 to 90 grade.

