



TQB Brands Pty Ltd



Setup Guide Leg Levelling Transmission Lifter

Product Codes: 2022T & 2063T

To correctly set up your TradeQuip Transmission Lifter so it is ready to go into service, the following steps need to be taken:

TRANSMISSION LIFTER LEG LEVELLING

1. Once you have securely fitted the wheels to the legs, place the legs upside down so the bottom bolts can be installed.
2. Once the nuts & bolts are in place, lightly tighten so the legs are secured into place. Legs can be fully tightened at the end.
3. Now that the 3 bolts underneath have been lightly fastened, flip the legs over and place the Transmission Lifter ram onto the leg base & match up with the bolt holes.
4. Lightly tighten all three bolts that hold the ram onto the leg base.
5. Now that the unit has all its bolts lightly tightened, to correctly level the legs, we recommend securely adding no more than 50-60kg of weight to the transmission lifter headstock on a flat surface. This will allow the legs to settle into position. Start by tightening the 3 side clamping bolts evenly to allow the legs to come together resulting in the legs being evenly levelled.
6. Lastly tilt the jack on its side and tighten the leg frame bolts.

