

Periodic maintenance is essential for the efficient operation of Manual Trolley Jacks. Lack of lubrication can cause severe wear, premature failure, and or additional strain on the hydraulic ram.

**We recommend the steps outlined below should be part of a minimum 3-month regular service depending on your frequency of use.**

## Lubrication Instructions

1. Front load bearing wheels and axles should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life, prevent premature wear and provide smooth rotation during lift operation.



2. Wheels and Castor axles, bearing races should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear and provide smooth rotation during lift and positioning.




3. Lubricate handle socket with a Light Bearing Grease to provide smooth operation from raise to release position.




4. Lubricate with a Light Bearing grease the inner square drive in the handle spigot.




5. Lubricate the handle socket pivot bolts with 30w/40w oil to prevent premature wear of the handle socket.

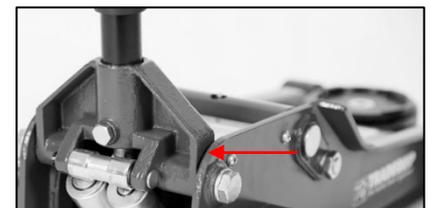


6. Lubricate Pump Piston Roller shaft with 30W/40W oil to ensure smooth operation under load.

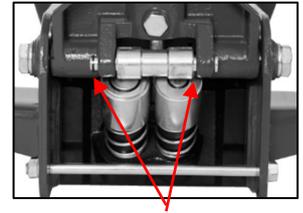


7. Lubricate Pump Piston Caps with a Light Bearing Grease to ensure smooth operation under load.

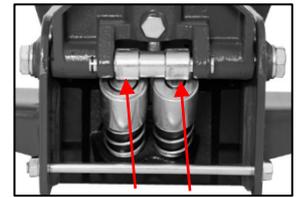

8. Lubricate the Main Fulcrum Pivot with a Light Bearing Grease via the Grease Nipple until grease comes out at the shaft ends.

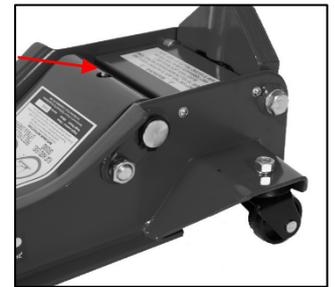

9. All lower lift arm pivots and pins in all linkages should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.

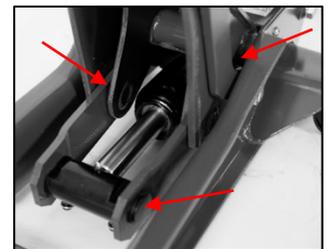

10. All upper Lift Arm Pivots and Load Cap should be lubricated with a 30W/40W oil to ensure long life and prevent premature wear.



**At this point your TradeQuip 2906T Trolley Jack should be ready for service.**

